


STEP 1

Prescriptive minimum window Flashing Requirements

Attach sill strip with top edge level with rough sill; extend edge of rough opening at least 8". Secure all building paper or similar approved flashing material with galvanized nails or power driven staples.

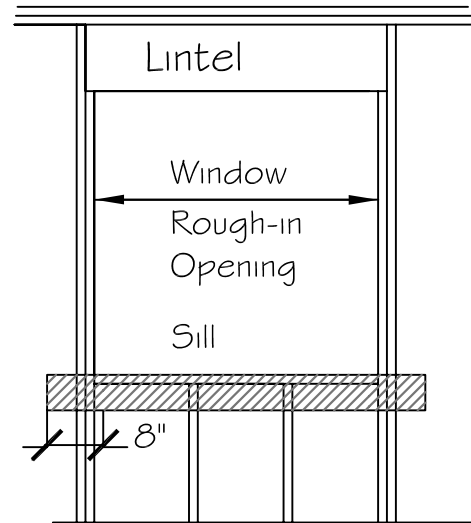

STEP 2

Install window into rough opening with sill flange over previously installed flashing.
Note: in applications where wall sheathing is used, sheathing shall be applied prior to flashing and window installation.

