


STEP 3

Prescriptive minimum window Flashing Requirements

Install jamb flashing to 1/2" less than the top of the head flashing. Attach head flashing over the window flange.

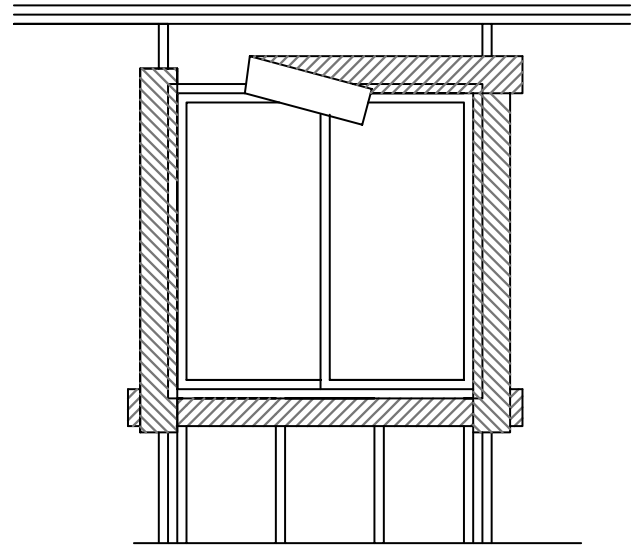

STEP 4

Commencing at the bottom (Sole plate) of the wall, lay building paper under sill strip. Cut any excess building paper that may extend above the sill flange line on each side of opening (shown as dashed line). Do not cut building paper horiz. so the paper will lap over the jamb strips. Install successive lines of building paper (B, C, D etc.) over jamb and head flanges, lapping each course.

